

# BIGBOI XTRACTR INSTRUCTION MANUAL

XTRACTR<sup>®</sup>MINI



# XTRACTR MINI

Please read the operating instructions carefully before use.





## INTRODUCTION

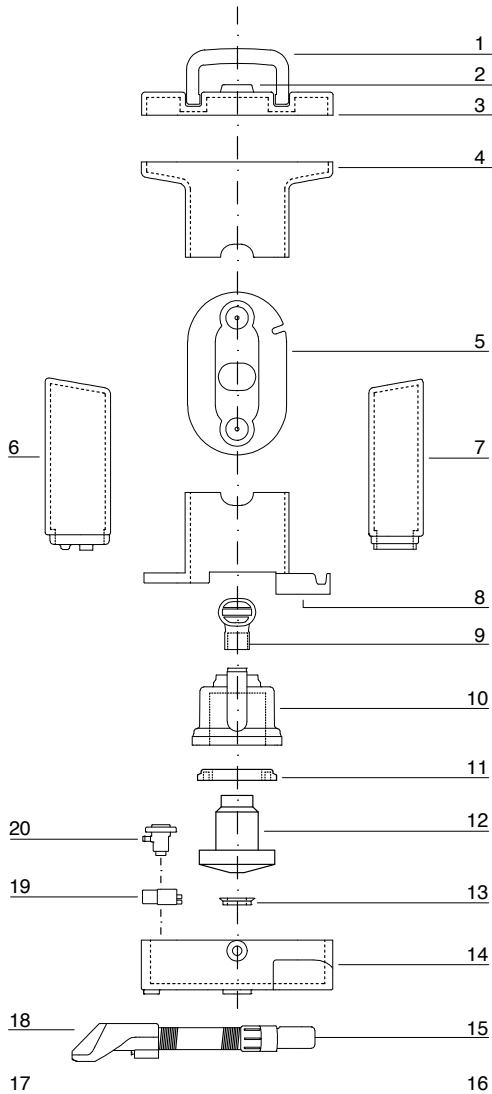 
Thank you for purchasing the bigboi **XTRACTR MINI**. Please read the following instructions carefully to help to ensure your personal safety and the correct assembly, use and maintenance of this equipment.

Please ensure that you have read and understand the information contained in the manual before attempting to use the equipment.

This equipment should only be used by trained and fully competent individuals, in a safe working environment. Please ensure that the appropriate safety equipment is worn at all times and that the product is not adapted or modified in anyway.

Please note that the contents of this instruction manual are based on the latest product information available at the time of publication and that the manufacturer reserves the right to make changes at any time without notice

No.	Name	Amount
1	Handle	1
2	Switch	1
3	Cover	1
4	Shell	1
5	Cable management system	1
6	Dirty water Tank	1
7	Clean water/Solution tank	1
8	Shell	1
9	Duct outlet	1
10	Motor cover	1
11	Shock absorber	1
12	Motor	1
13	Shock absorber	1
14	Base	1
15	Elbow connector	1
16	Hose connector	1
17	Hose	1
18	Stain head	1
19	Water pump	1
20	Connector	1





# IMPORTANT SAFETY INSTRUCTIONS

## READ ALL INSTRUCTIONS BEFORE USING YOUR PRODUCT.

When using an electrical product, basic precautions should be observed, including the following:



## WARNING

### TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Keep away from children.
- Unplug from electrical socket when not in use, before cleaning, maintaining or servicing the product, and if your product has an accessory tool with a moving brush, before connecting or disconnecting the tool.
- Do not immerse in water or liquid.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts of the product and its accessories.
- Do not use with damaged cable or plug.
- Keep cable away from heated surfaces.
- Do not leave product when plugged in.
- Use only the type and amount of liquids specified under the operations section of this guide.
- Liquid must not be directed towards equipment containing electrical components.
- Always connect to a properly earthed electrical socket. Do not modify earthed plug.
- Always install float before any wet pick-up operation.
- To unplug, grasp the plug, not the cable.
- Do not handle plug or product with wet hands.
- Turn OFF all controls before unplugging.
- Use only as described in this user guide.
- Use only manufacturer's recommended attachments.
- Do not put any object into openings.
- Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Do not use flammable or combustible liquids.
- Do not use toxic materials such as bleach, drain cleaner, ammonia etc. or toxic vapours.
- Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- Do not expose to rain. Store indoors.
- Floor slippery when wet.

## SAVE THESE INSTRUCTIONS

**ORIGINAL INSTRUCTIONS.**

**FOR OPERATION ON A 220-240 VOLT A.C. 50-60 HZ  
POWER SUPPLY ONLY.**

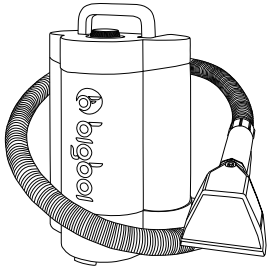 
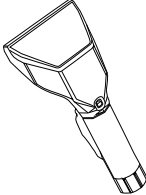 
# IMPORTANT INFORMATION

- Keep unit on a level surface.
- To reduce the risk of a leaking condition, do not store machine where freezing may occur. Damage to internal components may result.
- Plastic tanks are not dishwasher safe. Do not put tanks in dishwasher.

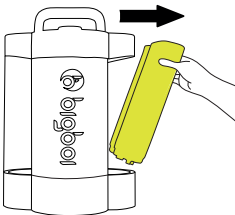 
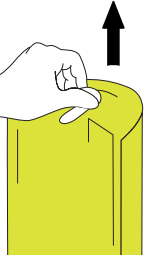 
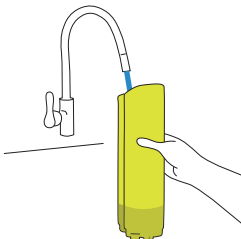 
## WHAT'S IN THE BOX?

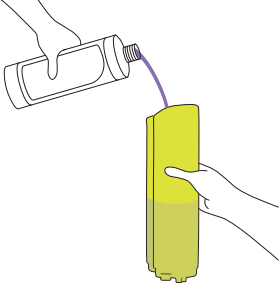 
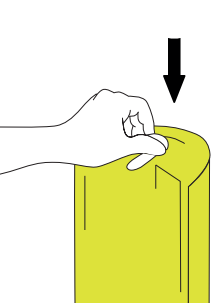 
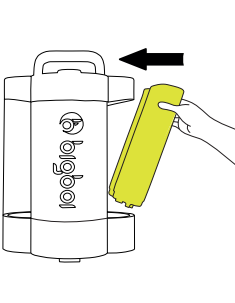 
**Bigboi XTRACTR MINI**

**4 inch extraction tool**

	
<p><b>MACHINE</b></p>	<p><b>TOOLS</b></p>

## FILLING THE CLEAN WATER TANK

		
<p>1. Remove the Clean Water Tank by pulling the top of the tank away from the machine.</p>	<p>2. Pull the black tab to reveal the tank opening. The plug rotates out of the way for easy filling.</p>	<p>3. Fill the tank with warm tap water (up to 45 degree) to the desired water line.</p>

		
<p>4. Add 50 ml of formula to 600ml of warm water or 100ml to 1200 ml of the XTRACTR CLEAN</p>	<p>5. Replace the tank plug by rotating into place and pressing gently onto tank.</p>	<p>6. Place back the tank by lining up the bottom of the tank as in image. Push the top of the tank into place until you hear a click sound.</p>

## **⚠ WARNING**

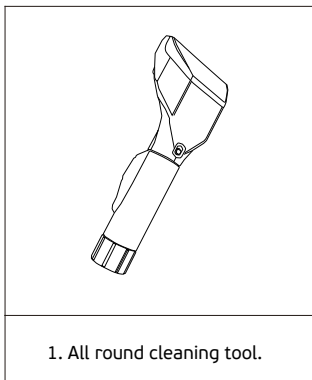 
TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK DUE TO INTERNAL COMPONENT DAMAGE, USE ONLY Bigboi **XTRACTR CLEAN** formula INTENDED FOR USE WITH THIS MACHINE.

## **GETTING READY TO CLEAN**

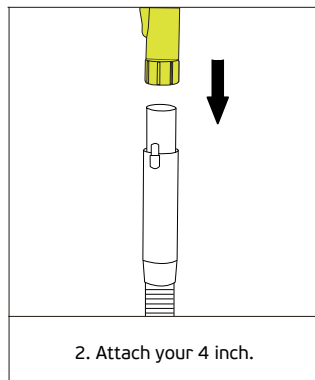 
### **BEFORE YOU START CLEANING**

1. Vacuum to remove loose dirt from area to be cleaned.
2. Spray the formula onto the desired area and work the formula into the stain with a brush or drill brush. Repeat this process until you are happy with the result.
3. Allow to sit for at least 3 minutes.
4. Clean by following the below instructions:

### **ADD THE 4 INCH TOOL**

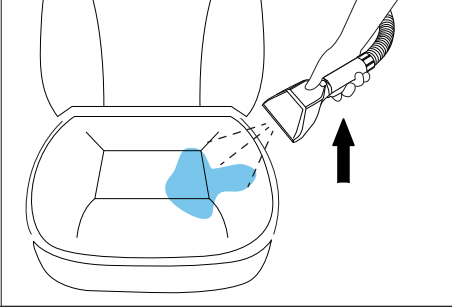 
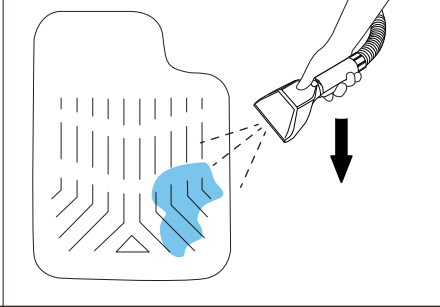 


### **ATTACHING THE TOOL**

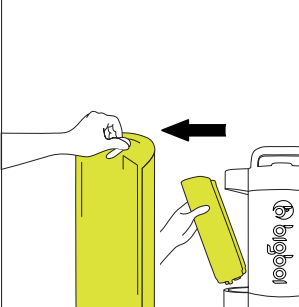 
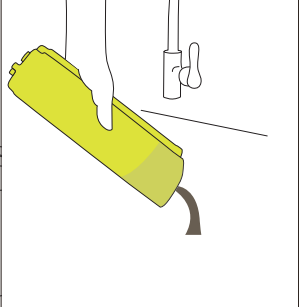 
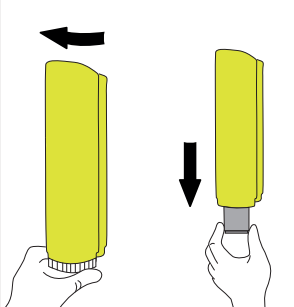 


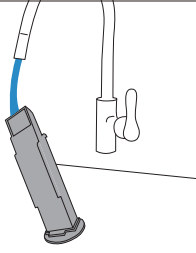 
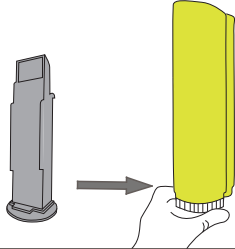 
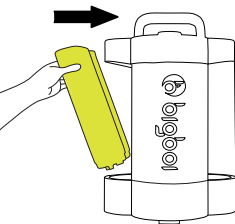 
# USING THE TOOLS

## 4 INCH SPRAYING TOOL

	
<p>1. Point the tool approximately 1 inch above the spot or stain and press the spray trigger.</p>	<p>2. Release the spray nozzle trigger and gently scrub the stain. Repeat the process if needed.</p>

# AFTER-CLEANING CARE

		
<p>1. Remove the dirty water tank by pulling the top of the tank away from the machine.</p>	<p>2. Pull the black tab to reveal the tank opening. The plug rotates out of the way for easy filling.</p>	<p>3. The float stack can be removed from the Dirty Water Tank for cleaning. Turn the cap counter-clockwise to remove it. Then pull the float stack outward to remove from the tank.</p>

		
<p>4. Rinse with water until all debris is removed and let air dry.</p>	<p>5. Return the float stack to the Dirty Water Tank. Ensure all pieces are assembled, as shown. Screw the cap back on clockwise until tightened.</p>	<p>6. Place back the tank by lining up the bottom of the tank as in image. Push the top of the tank into place until you hear a click sound.</p>

**⚠ WARNING**

TO REDUCE THE RISK OF ELECTRIC SHOCK, TURN POWER OFF AND DISCONNECT FROM ELECTRICAL OUTLET BEFORE PERFORMING MAINTENANCE OR TROUBLESHOOTING.

## STORING YOUR MACHINE

Store machine in protected, dry area at room temperature (4° C - 40° C).

# TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	REMEDIES
Reduced Spray or No Spray	Spray nozzle clogged.	Clean spray nozzle using an unfolded paper clip.
	Clean Water Tank empty.	Check/fill tank.
	Clean Water Tank insert clogged.	Clean insert at bottom of Clean Water Tank.
	Pump needs priming.	Gently lift Clean Water Tank while pressing the spray trigger OR gently squeeze clean tank while pressing spray trigger.
	Clean Water Tank not fully seated.	Remove and reseat Clean Water Tank.
Carpet Cleaner Won't Pick Up Cleaning Solution	Poor tool position.	Reposition on surface, follow recommended cleaning procedures.
	Dirty Water Tank is full.	Empty Dirty Water Tank.
	Excess solution in Flex Hose.	Lift tool and point upwards to allow water in hose to flow into the Dirty Water Tank.
	Incorrect cleaning formula.	Use BIGBOI® Portable Machine formulas only.
	Dirty Water Tank is improperly seated onto base.	Remove and reseat tank.
	Dirty Water Tank plug is unplugged.	Push in Dirty Water Tank plug until properly sealed.
Dirty Water Tank Leaking	Valve is dirty.	Clean the valve located at the bottom of the Dirty Water Tank. Once cleaned, make sure it is placed securely back in place.
	Float stack not fully locked on Dirty Water Tank.	Remove float stack and twist until arrow is aligned with lock symbol on Dirty Water Tank.
	Dirty Water Tank not properly seated onto machine.	Remove and reseat onto machine.

Note: Any other servicing should be performed by an authorised service representative.

## NOTICE

To reduce the risk of a leaking condition, do not store machine where freezing may occur. Damage to internal components may result.



## WARNING

TO REDUCE THE RISK OF ELECTRIC SHOCK, TURN POWER OFF AND DISCONNECT FROM ELECTRICAL OUTLET BEFORE PERFORMING MAINTENANCE OR TROUBLESHOOTING.

## **WARRANTY**

This product is under warranty to the original retail consumer against defects in material and workmanship for a period of **1 (ONE) year** on machine, 30 days on gun and hose assembly, from the date of retail purchase and is not transferable.

Warranty covers replacement parts. This limited one year warranty applies only to products used in consumer applications and does not apply to rental or commercial applications.

For more information please visit **[www.ibigboi.com](http://www.ibigboi.com)** under warranty.



## **IMPORTANT SAFETY FIRST**

Before attempting to use this product please read all of the safety precautions and operating instructions outlined in this manual to reduce the risk of damage to the products and personal injury.

For more information please visit or contact us on

[www.ibigboi.com](http://www.ibigboi.com)

[hello@bigboi.com](mailto:hello@bigboi.com)

**ANOTHER PRODUCT FROM BIGBOI INTERNATIONAL**